

# FIND YOUR OPENER

ALL ASSEMBLIES INCLUDE THE TIP



Granular



Granular + Phos



Liquid



Liquid + Phos

## C-SHANK

612-ASY-0711	612-ASY-0711P	612-ASY-0711L	612-ASY-0711LP
612-ASY-0712	612-ASY-0712P	612-ASY-0712L	612-ASY-0712LP

## EDGE ON BOURGAULT PHD\* MORRIS MAXIM

680-ASY-0711G	680-ASY-0711GP	680-ASY-0711L	680-ASY-0711LP
680-ASY-0712G	680-ASY-0712GP	680-ASY-0712L	680-ASY-0712LP

## CASE IH ATX 700 NH P2060 FLEXI-COIL 5500 CONCORD

694-ASY-0711G	694-ASY-0711GP	694-ASY-0711L	694-ASY-0711LP
694-ASY-0712G	694-ASY-0712GP	694-ASY-0712L	694-ASY-0712LP

## CASE IH 800 NH P2070 FLEXI-COIL PD5700

684-ASY-0711G	684-ASY-0711GP	684-ASY-0711L	684-ASY-0711LP
684-ASY-0712G	684-ASY-0712GP	684-ASY-0712L	684-ASY-0712LP

## MORRIS CONTOUR I

683-ASY-0711G	683-ASY-0711GP	683-ASY-0711L	683-ASY-0711LP
683-ASY0712G	683-ASY0712GP	683-ASY0712L	683-ASY0712LP

## MORRIS CONTOUR II

693-ASY-0711G	693-ASY-0711GP	693-ASY-0711L	693-ASY-0711LP
693-ASY-0712G	693-ASY-0712GP	693-ASY-0712L	693-ASY-0712LP


## SEED HAWK INC.\*\*

686-ASY-0711G	686-ASY-0711GP	686-ASY-0711L	686-ASY-0711LP
686-ASY-0712G	686-ASY-0712GP	686-ASY-0712L	686-ASY-0712LP

\* When installing on a Bourgaault PHD use bolt holes pictured in Fig. 1

\*\* When using on Seed Hawk Inc. drills, you must remove both seed and fertilizer shanks and install the opener on the front mount (fertilizer shank).

Fig. 1

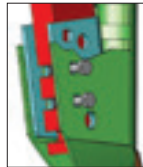

### Opener Features:

- Long-wearing carbide-enforced chrome tip is reinforced where you need it – on the nose and wing.
- Hard facing is placed on critical wear points to ensure a long-lasting holder, proper seed placement and virtually no plugging.
- The streamlined holder design combined with the front delivery concept reduces plugging and encourages trash clearance.

**ALL WINGS ON SIDE BAND OPENERS MUST BE POINTING INWARD TO THE CENTER OF THE SEEDING UNIT TO PREVENT PLUGGING WHEN TURNING.**

For a more detailed view of these openers see page 100-101.



612-ASY-0711L



693-ASY-0711G



694-ASY-0711L