




610-ASY-4020

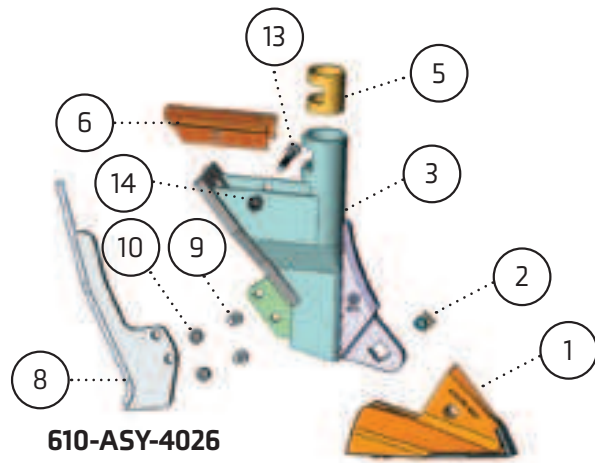

610-ASY-4026

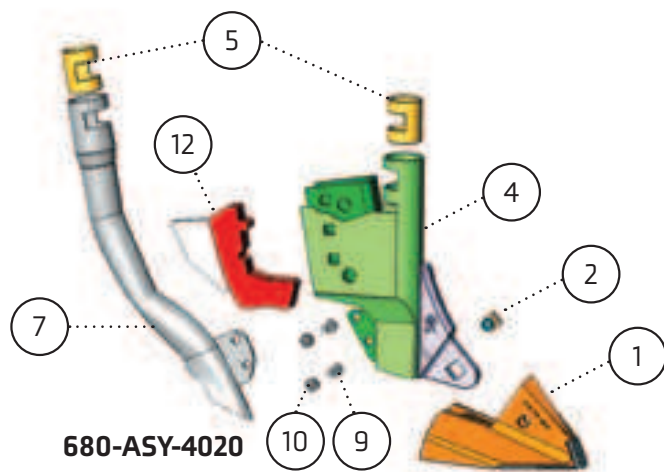

680-ASY-4020

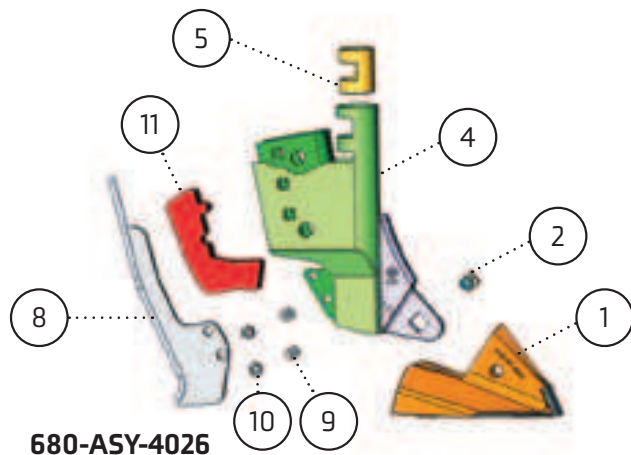

680-ASY-4026

PART#		610-ASY-4020	610-ASY-4026	680-ASY-4020	680-ASY-4026
1	610-TIP-4041	■	■	■	■
2	200-BNC-3100	■	■	■	■
3	610-HLD-2000	■	■		
4	680-HLD-2000			■	■
5	880-BSH-1130	■	■	■	■
6	047-CAP-1000	■	■		
7	610-TUB-1001	■	■	■	
8	610-TUB-2526		■		■
9	942-HRG-0754	■	■	■	■
10	906-NPT-2505	■	■	■	■
11	680-ACC-0002*				■
12	680-ACC-0003**			■	
13	942-HRG-2004	■	■		
14	908-NNI-2504	■	■		

* 680-ACC-0002 is a spacer plate required for Bourgault 3310 & 3320 only, **not included in assembly**. See page 89 for more information.

** 680-ACC-0003 is a spacer plate required for Bourgault 3310 & 3320 only, **not included in assembly**. See page 89 for more information.