



MULTI-SHOOT OPENERS TO FIT **C-SHANK**

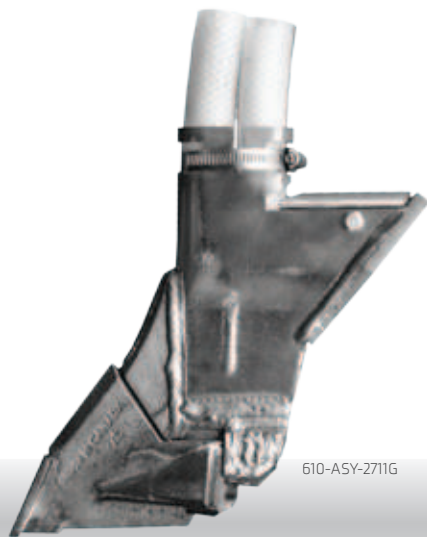

610-ASY-2711G

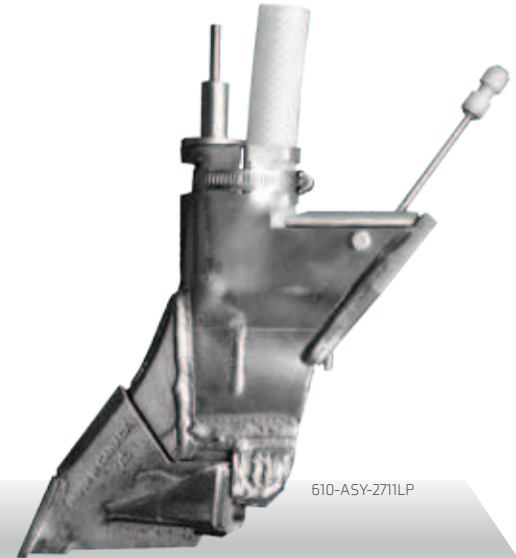

610-ASY-2711LP



Granular N



Granular + Liquid Phos



Liquid N



Liquid N + Liquid Phos

610-ASY-2711G
610-ASY-2712G



610-ASY-2711GP
610-ASY-2712GP

610-ASY-2711L
610-ASY-2712L

610-ASY-2711LP
610-ASY-2712LP

THESE **SIDE BAND** OPENERS FIT: **C-SHANK**

REAR VIEW

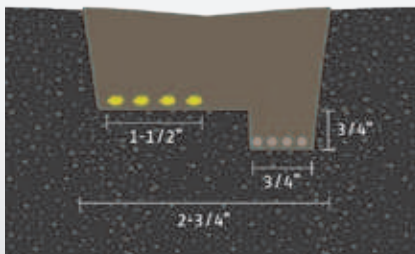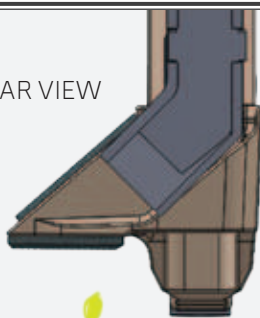

seed fertilizer



Drawing for illustration purposes only. All measurements shown are approximate. Results may vary with multiple factors including soil conditions, ground speed, application rates, fan speeds and more. In less than ideal conditions, mixing between seed and fertilizer may occur. **For more information please refer to precautions and risk factors on page 22-23.**

Seed Placement: The seed is placed 3/4" (19 mm) above and to the side of the fertilizer row, after the carbide wafer under the tip's wing seals the fertilizer trench and firms up the seed bed.

Fertilizer Placement: Fertilizer is placed in the center 3/4" (19 mm) below the seed bed. The carbide wafer under the wing seals the fertilizer trench before the seed is placed. In less than ideal conditions, mixing between seed and fertilizer may occur. **For more information please refer to precautions and risk factors on page 22-23.**

Replaceable tip: Cast chrome tip with extra long carbide inserts on the nose of the tip for excellent penetration and wear resistance. Top face of wing is covered with two carbide inserts providing excellent wear resistance. Carbide wafer under the wing to seal fertilizer trench, and firm the seed bed prior to seed placement.

Assemblies on this page include the tip.

Packer Recommendation: 3" (76 mm) or wider. **V-Packer not recommended with these openers.**

Opener Features: Hard facing is placed on critical wear points to ensure a long-lasting holder and proper seed placement. The streamlined holder design reduces plugging and allows for better trash clearance.

Installation Notes: When installing on 50° shanks other than Bourgault or Ezee-On use wedge **880-WDG-0300** or **880-WDG-0301**. See page 106 for more information.

ALL WINGS ON SIDE BAND OPENERS MUST BE POINTING INWARD TO THE CENTER OF THE SEEDING UNIT TO PREVENT PLUGGING WHEN TURNING. CUSTOMER MUST ORDER HALF LEFT AND HALF RIGHT WING OPENERS.

For a more detailed view of these openers see page 120.